



### FM Radio DIY Kit assembling instructions


1. Remove one side protective film from the double sided foam pad and stick it underneath the circuit board without covering any holes.
2. Connect the top wall (with the button texts) with the rear wall as shown in the picture. Don't tighten the 5 screws, leave them all just started (1 x panel, 4 x PCB):

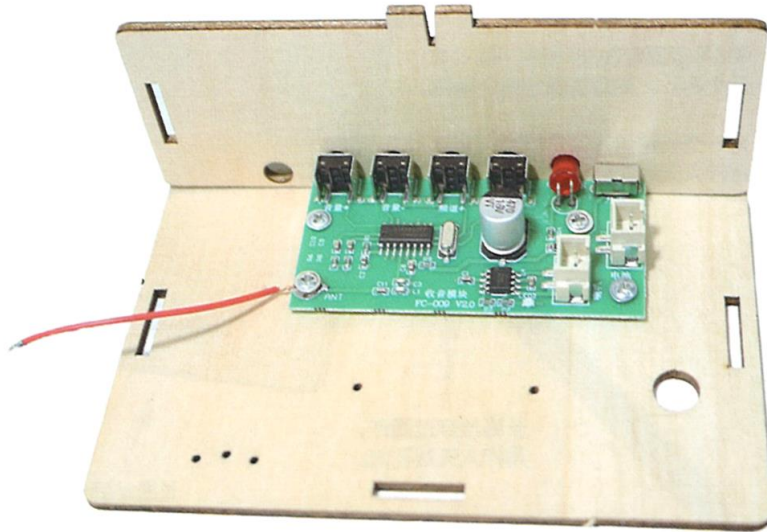

3. Use 2 screws to attach the battery holder to the rear wall, then feed the battery wire and connector through the hole in the rear wall and connect the battery cable.

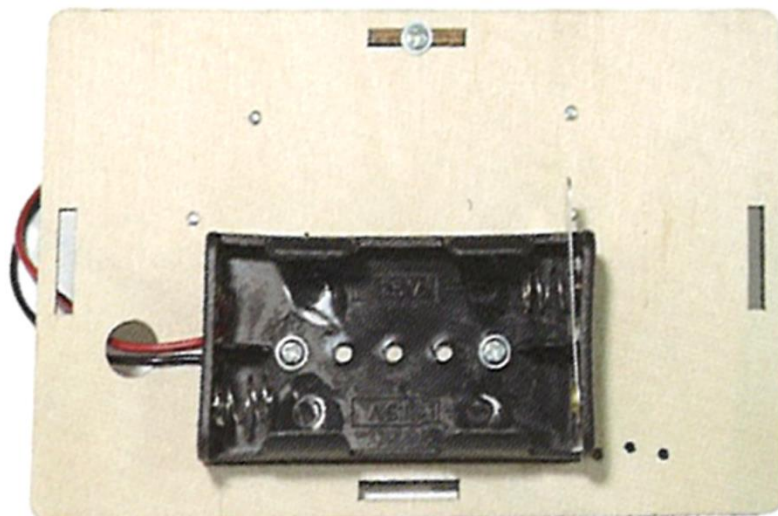

4. Attach the antenna holder bracket to the rear panel and mount the antenna together with the antenna wire like this:

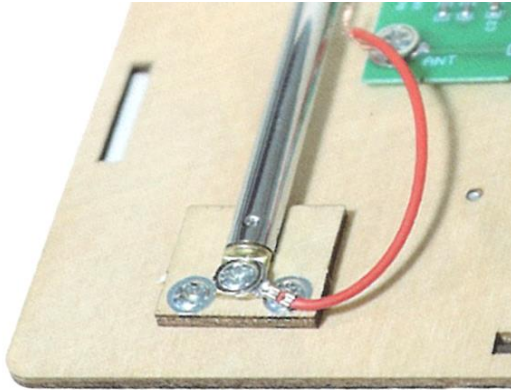

5. Use 4 short screws to mount the speaker to the front panel. Attach the wires to the speaker (red to [+] and black to [-]) by twisting their ends, or (better) solder them.
6. After attaching the speaker cable, install the side walls before you are tightening the 5 screws from step 2.
7. Close the box by attaching the front panel and fix all the part using the remaining screws.

